

Quick Start Guide

Panic Button

01 Important Safeguards and Warnings

Please read the following safeguards and warnings carefully before using the product in order to avoid damages and losses.

Note:

- Do not expose the device to lampblack, steam or dust. Otherwise it may cause fire or electric shock.
- Do not install the device at position exposed to sunlight or in high temperature. Temperature rise in device may cause fire.
- Do not expose the device to humid environment. Otherwise it may cause fire.

- The device must be installed on solid and flat surface in order to guarantee safety under load and earthquake. Otherwise, it may cause device to fall off or turnover.
- Do not place the device on carpet or quilt.
- Do not block air vent of the device or ventilation around the device. Otherwise, temperature in device will rise and may cause fire.
- Do not place any object on the device.
- Do not disassemble the device without professional instruction.

Warning

- Please use battery properly to avoid fire, explosion and other dangers.
- Please replace used battery with battery of the same type.

- Do not use power line other than the one specified. Please use it properly. Otherwise, it may cause fire or electric shock.

Special Announcement

- This manual is for reference only.
- All the designs and software here are subject to change without prior written notice.
- All trademarks and registered trademarks are the properties of their respective owners.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website for more information.

02 Checklist

Please check if device appearance is damaged, and check if accessories are complete. Please refer to actual quick start guide.

Panic Button	1	Strap	1
Manual	1	Foam Rubber	1
Cr2450 Battery	1		

03 Product Structure

Before you use this product, please carefully read this guide.

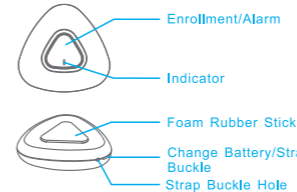 


Figure 3-1

04 Install Battery

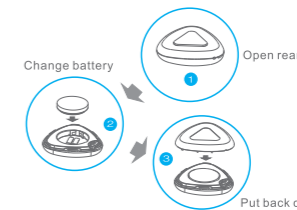 


Figure 4-1

Tips:
When you install battery, be sure side with CR2450 is up.

05 Product Installation

[Foam Rubber Installation]

When you want to fix button at a certain place, please use foam rubber.

- Step 1. Stick foam rubber at back of the button.
- Step 2. Select position you want to install.
- Step 3. Stick the button to designated position, hold about 5s and release.



Figure 5-1

Tips:

Please clean up the position you want to install device before installation.

【Strap Installation】

When you want to wear strap, please:

Step 1. Open rear cover.

Step 2. Place one end of strap into buckle and put back cover.

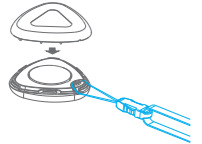 


Figure 5-2

06 Indicator and Button

【Indicator】

► Enrollment in network

- Red indicator quickly flashes, and turns off, means enrollment is successful.
- Red indicator quickly flashes, and slowly flashes for three times, means

【Enrollment fails】

► Trigger alarm

- Green indicator flashes once, means alarm is successful.
- Red indicator flashes once, means alarm fails.

【Button】

- Press button once to “enroll/alarm”, you can alarm or enroll in hub again.
- Within one minute after you re-plug the button to power, quickly press the button for 5 times to cancel “enrollment/alarm”.

07 Operation

This product shall be used with intelligent alarm hub.

【Network Enrollment】

Step 1. When network hub is working normally, press button once to enter enrollment mode.

Step 2. Install battery, red indicator quickly flashed. If indicator turns off and hub buzzers, then enrollment is successful. If red indicator slowly flashes for three times, then enrollment fails, please try again.

Tips:

When the device disconnects hub due to distance, outage and other factors, it will not automatically re-connect the hub, and you need to press the button once to “enroll/alarm”. When it is re-enrolling, after red indicator quickly flashes once, if green indicator flashes once, then enrollment is successful; if red indicator flashes once, then enrollment fails.

【Alarm】

After successfully enrolled hub, press the button once to “enroll/alarm”, if green indicator flashes once, then alarms successfully; if red indicator flashes once, then alarm fails.

【Cancel Enrollment】

If you to enroll this button in other hub, please cancel enrollment info of this button first.

Step 1. Take off battery, and re-install battery.

Step 2. Within one minute after you re-install battery, quickly press the button for 5 times to cancel “enrollment/alarm”. When red indicator NO, it means enrollment is cancelled.

08 FAQ

Q: Enrollment with hub fails, why?

A: Possible cause:

- Button low battery or hub has power failure.
- Check if hub has entered enrollment mode.
- Device has enrolled into other hub.
- Distance is too long, over valid communication distance.

Q: No response after touch?

A: Possible cause:

- Button low battery or hub has power failure.
- Distance is too long, over valid communication distance.
- Button is broken.

Q: After alarm event is triggered, I did not receive push on mobile phone?

A: Possible cause:

- Check if panic button connects to the Internet.
- Check connection of hub.
- Check if the mobile has turned off push function.

Note:

- This manual is for reference only. Slight difference may be found in user interface.
- All the designs and software here are subject to change without prior written notice.
- All trademarks and registered trademarks are the properties of their respective owners.
- If there is any uncertainty or controversy, please refer to the final explanation of us.
- Please visit our website or contact your local service engineer for more information.