

MAGELLAN™

K32RF - User's Quick Reference Guide

KEYPAD OVERVIEW


Off Light (orange)
 On = Disarmed
 Off = System armed

Power and Rx/Tx Light
 On = Power on
 Off = Power off
 Fast Flash = Transmission/
 reception in progress
 Slow Flash = AC loss on keypad

StayD (grn)
 On = StayD mode enabled
 Slow Flash = Low battery on keypad



= Press once + **[MASTER CODE]** for Quick Menu Programming)

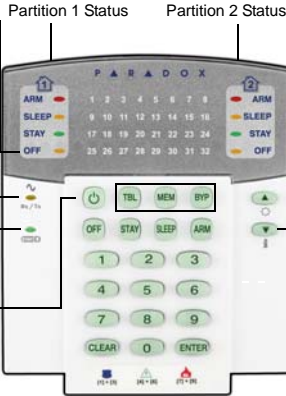

K32RF Keypad

Arm (red), Sleep (yel), Stay (grn):
 On = Partition armed
 Off = Partition disarmed
 Flash = Exit Delay
 Fast Flash* = Exit Delay (final 10 sec.)
 Fast Flash* = Partition in alarm

*** Audible Indicators:**
 Continuous beep = Alarm,
 Variable beep = Fire alarm
 Intermittent beep = Beginning of exit delay
 Fast beep = Final 10 sec. of exit delay

Info Key
 Refresh display to see all open zones.

[TBL] Trouble display
 ON = Trouble(s) occurring

[MEM] Alarm memory display
 ON = Alarm(s) occurred

[BYP] Bypass programming
 ON = Zone(s) bypassed

Zone Display:

The numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

ARMING AND DISARMING

**TO ARM
WHEN LEAVING...**



**TO ARM
WHEN STAYING...**



To Regular Arm:

1. Close all zones in the desired partition.
2. Press **[ARM]**.
3. Enter your **[ACCESS CODE]**.

To Stay Arm:

1. Press the **[STAY]** key.
2. Enter your **[ACCESS CODE]***.

To Sleep Arm:

1. Press the **[SLEEP]** key.
2. Enter your **[ACCESS CODE]***.

To Disarm:
[OFF] + [ACCESS CODE]*

* If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

PANIC ALARMS

To send a silent or audible alarm to your Security Company, press and hold one of the button combinations listed for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [6]
Fire	Press [7] & [9]

TROUBLE DISPLAY

When a trouble condition occurs, the **[TBL]** key will illuminate.

1. Press the **[TBL]** key. The key will flash and number(s) corresponding to the trouble(s) will illuminate.
2. Read the corresponding explanation of the trouble from the trouble list in the MG5000 User Guide. If no repair instructions are given, call your security company for repairs.
3. Press the **[CLEAR]** key to exit.

BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]***.
3. The corresponding LED of all open zones will illuminate. Select the zone(s) you want to bypass by entering the two-digit zone number (i.e. zone 3 = 03). The corresponding zone LED will flash.
4. Press the **[ENTER]** key to save and exit.

ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will illuminate.
4. Press the **[CLEAR]** key to exit.

KEYPAD SETTINGS

To mute the keypad:

Press and hold the **[CLEAR]** key for 6 seconds to enable or disable Keypad Muting.

To modify the backlight:

1. Press and hold the **[▲]** key for 3 seconds.
2. The **[MEM]** key will illuminate.
3. Press the **[▲]** key to set the desired backlight level.
4. Press **[CLEAR]** or **[ENTER]** to exit.

© 2010 Paradox Security Systems Ltd.
Magellan is a trademark or registered trademark of
Paradox Security Systems Ltd. and its affiliates in
Canada, the United States, and/or other countries.
All rights reserved.



PARADOX.COM

Printed in Canada 07/2010

K32RF-EQ02